

# 2D-view cutting planes

Tutorial	
Name:	2D-view cutting planes
Description:	Setting the tolerance for cutting planes within 2D views such that all desired objects are displayed.
Program:	SAP2000
Version:	14.2.0
Model ID:	na

Within 2D views, only entities within the 2D View Cutting Planes tolerance are displayed. If objects which should be displayed are not shown, tolerance may be increased through Options > Dimensions/Tolerances > 2D View Cutting Planes +/-.

The blue up and down arrows change the elevation at which the 2D view is taken, as shown in Figure 1:

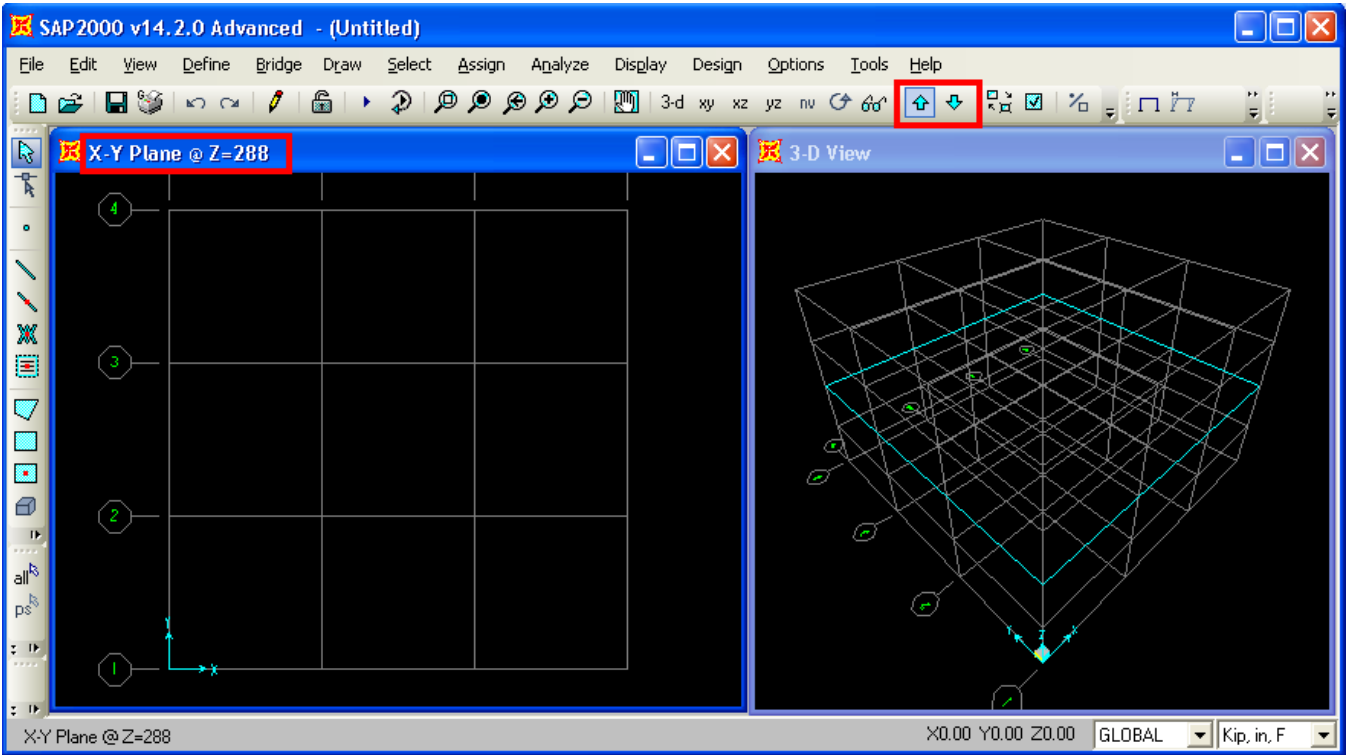


Figure 1 - Adjust view elevation