

# Design strips

[SAFE](#) automatically generates the control points which indicate maximum and minimum forces which occur within slab **design strips**. Controls are not available for these points since their function is internal to the software.

To generate additional control points, and thereby report more detail regarding slab response, multiple strips may be modeled lengthwise, rather than a single [design](#) strip for the entire length.