

# Punching shear

A number of factors may affect the modeling and formulation of **punching shear**. Select the Design > Punching Shear Design Overwrites option to ensure that punching-shear perimeters and column/pier location types are as intended. Here, you may manually adjust any parameters to meet the actual conditions of the model.

## Articles

Program related articles:

General articles: